


乾船塢(dry dock)

用鋼筋混凝土板樁、鋼板樁塊混凝土牆為塢牆,塢口設有活動閘門。待修船隻入塢時,放水入塢開放閘門。入塢後關閉閘門,抽除塢中之水,至船舶安置於塢墩上,成為乾燥場所。修妥後開啟閘門使塢內進水,船舶在塢內浮起後拖出塢外。

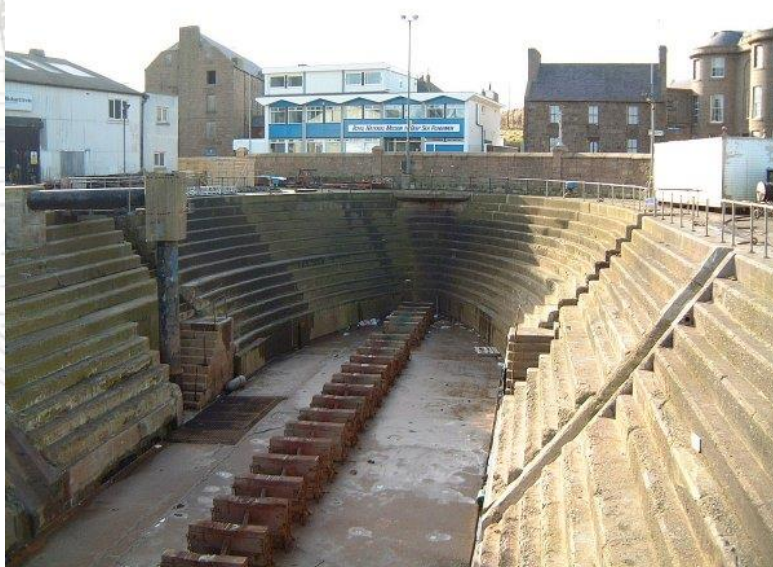

摘自:

http://www.scran.ac.uk/packs/exhibitions/learning_materials/webs/40/images/dry_dock.jpg



摘自:<http://www.bayonnedrydock.com/images/bayonnedxLARGE.jpg>